










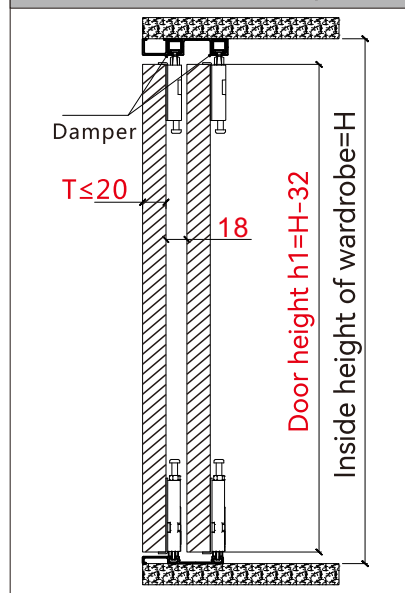


## StrongLine Piato - (540953 / 540954) soft closing sliding door system installation guide


Accessories	Picture	2 Door	3 Door	Accessories	Picture	2 Door	3 Door
Upper runner		4PCS	6PCS	Down runner		4PCS	6PCS
Allen key		1PCS	1PCS	ST4X14 Cross recessed pan head tapping screw		32PCS	48PCS
Upper rail				Down rail			
				Down rail cover (For optional)			
Damper						4PCS	4PCS

Rail Size	
 <p>73.1mm</p> <p>Upper rail</p>	 <p>69.1mm</p> <p>Down rail</p>
 <p>27.6mm</p> <p>Down rail cover (for optional)</p>	


Wood door installation picture




Wood door installation picture

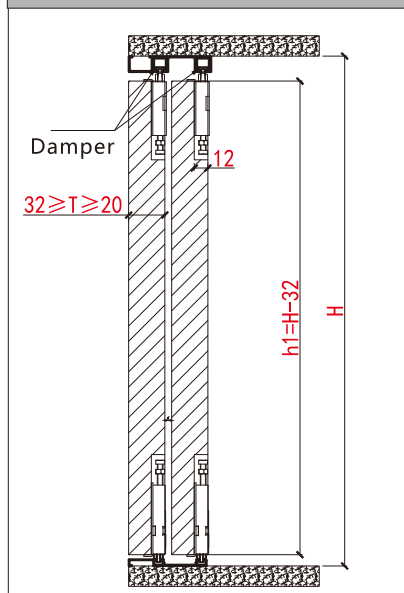


Runner installation picture

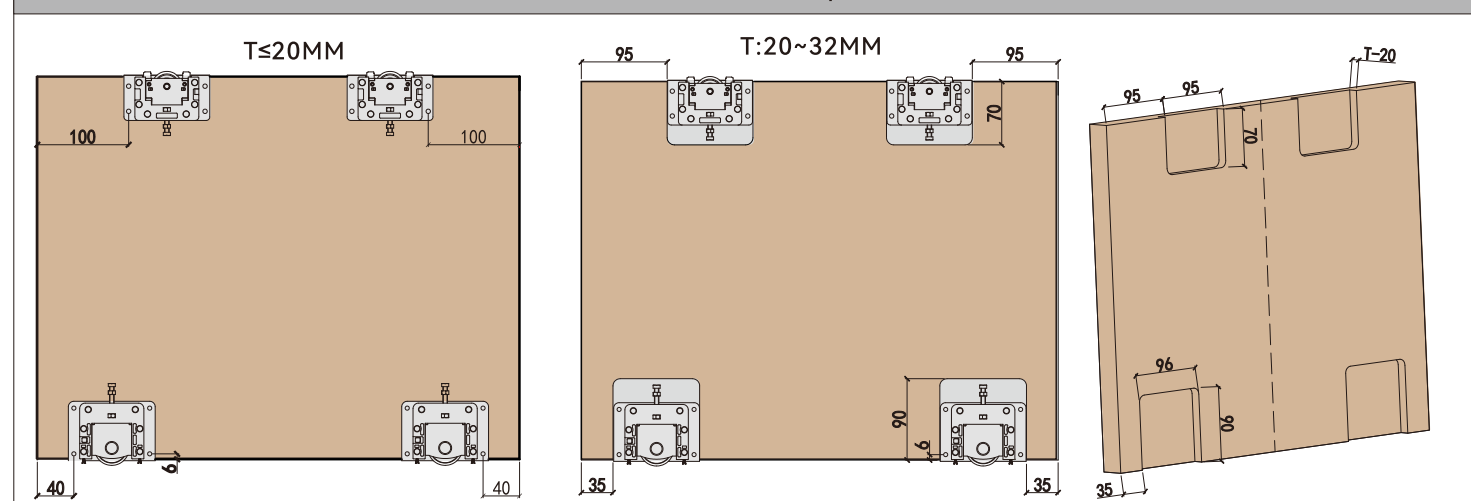


## 1.Damper installation

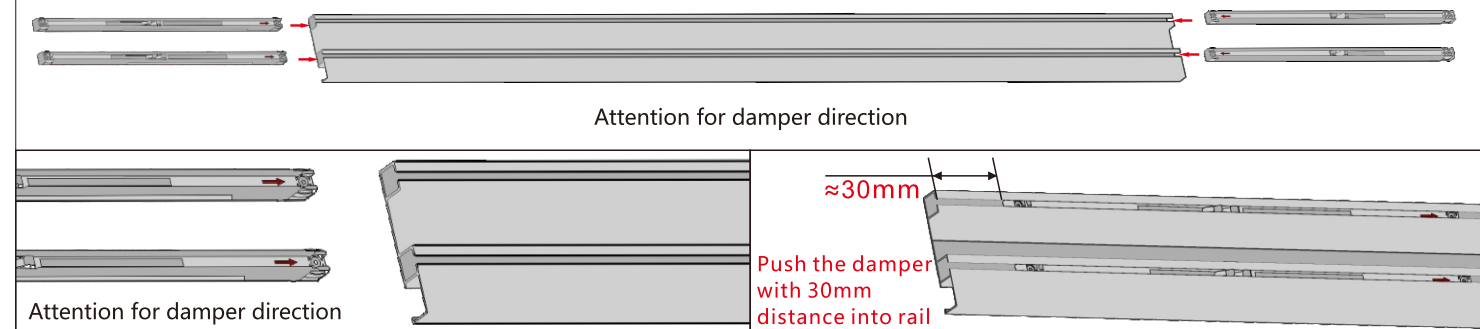

## 2.Rail installation


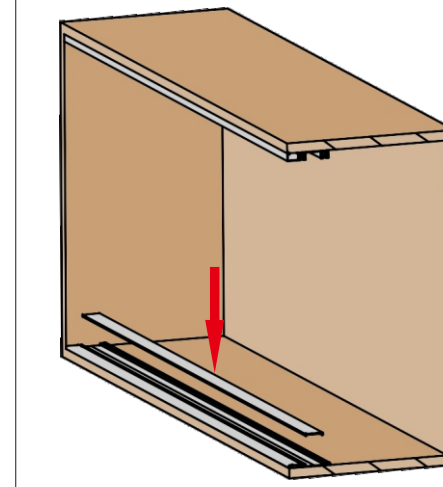


### 3.Runner installation

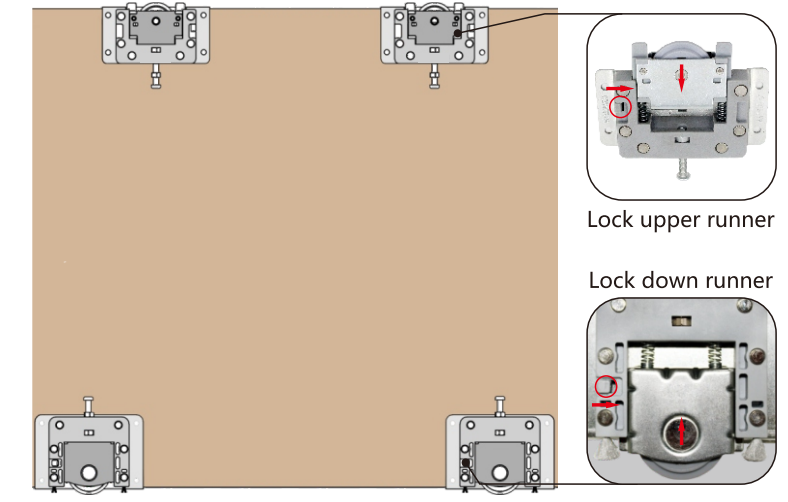

#### 4. Door installation

First install upper runner, then down runner,  
unlock runner after door installation

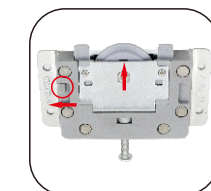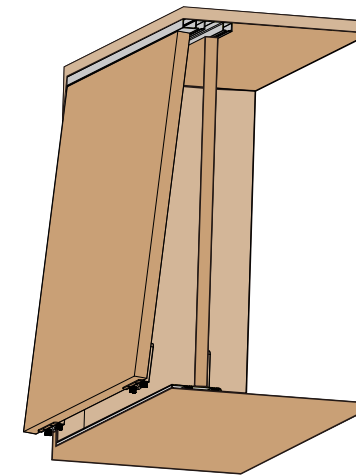

unlock upper runner




unlock down runner

## 5.Damper position




Push the hook to the position according to picture

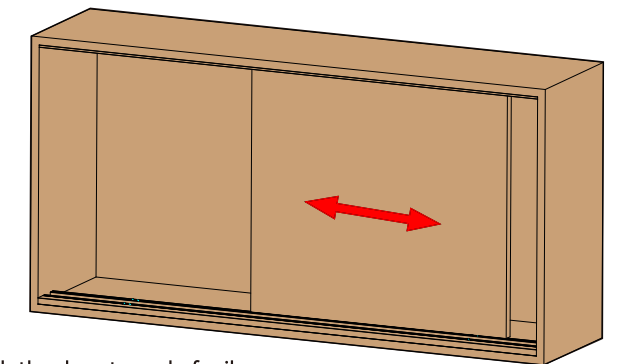

Push the door to end of rail


## 6.Screw the damper

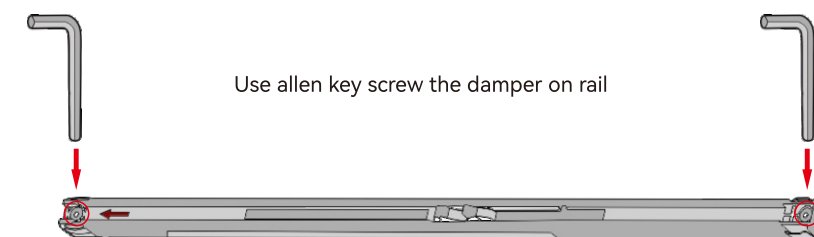

Use allen key screw the damper on rail

## 7.Regulate the door gap

### 1.Regulate the screw on runner

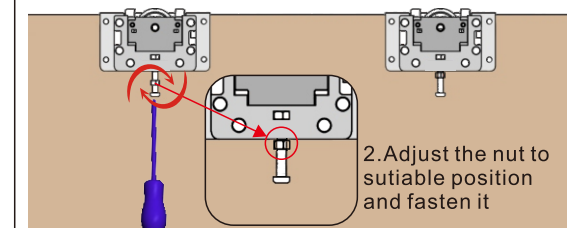

2. Adjust the nut to suitable position and fasten it